






Pohon



Montážny predpis


Inštalčný návod pre elektrikára

Pre použitie v bežnom prostredí

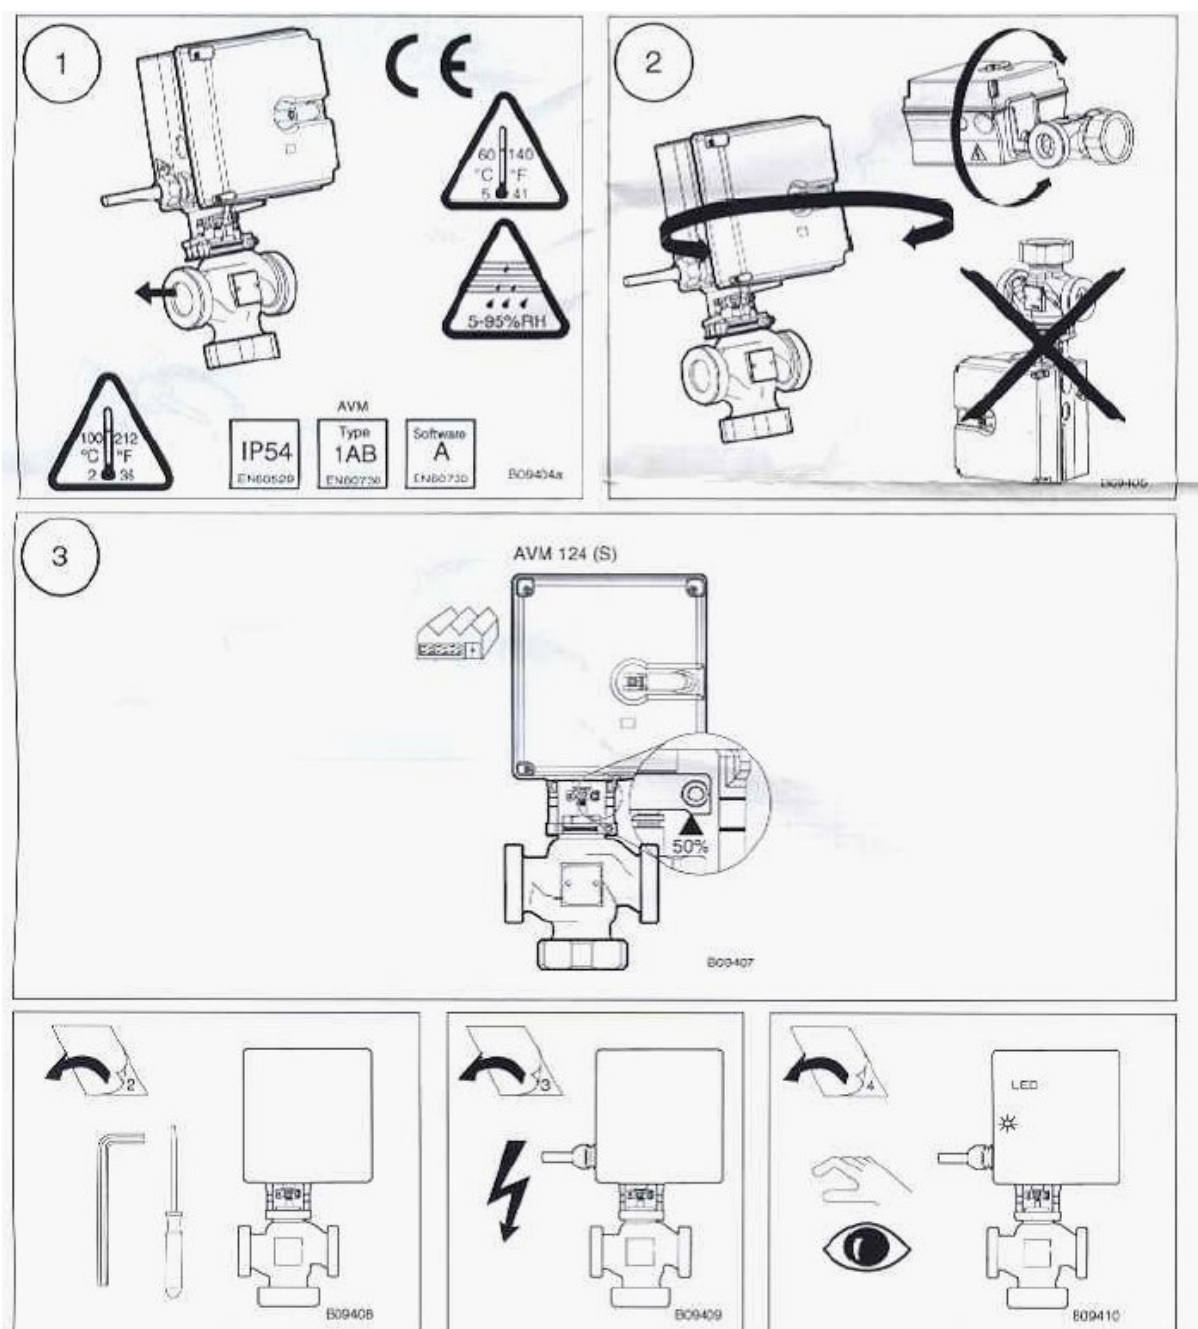

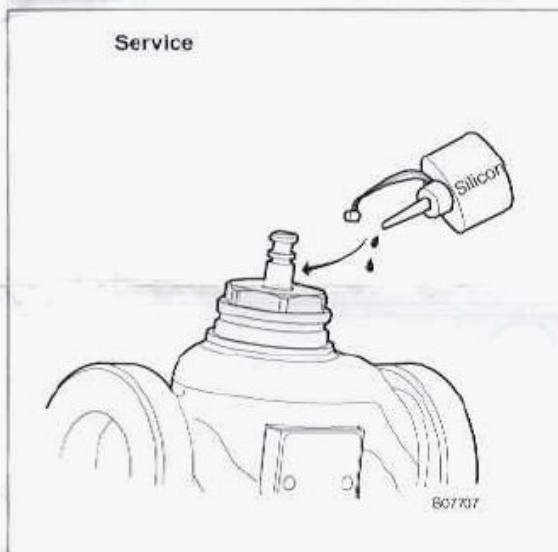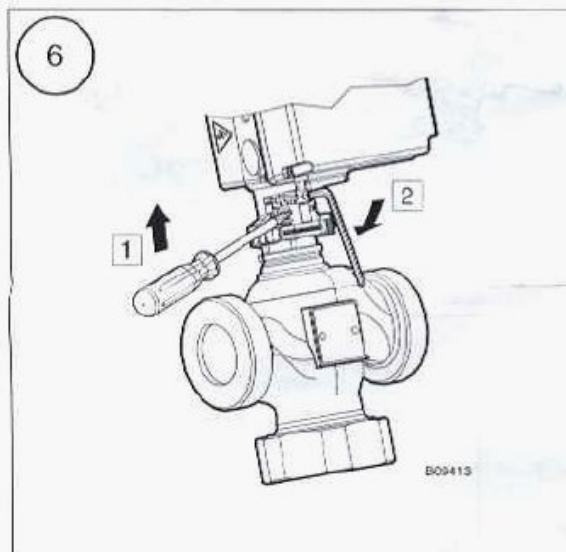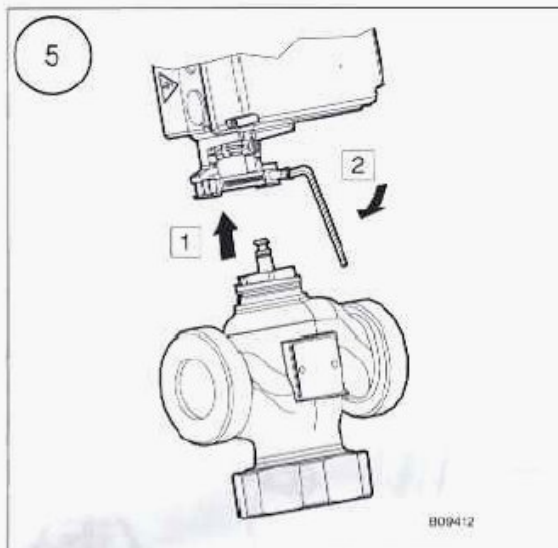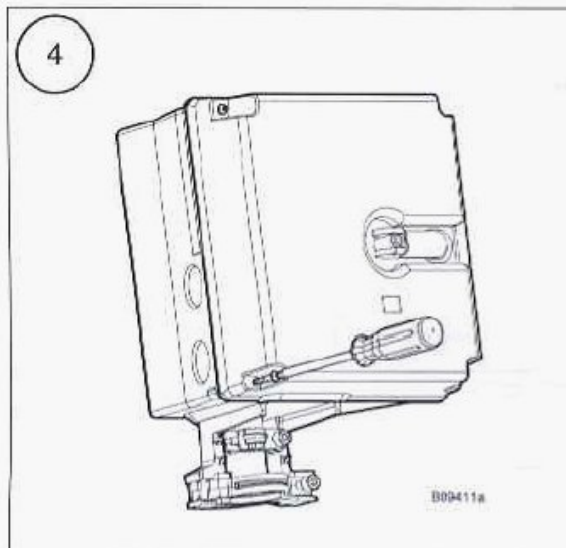

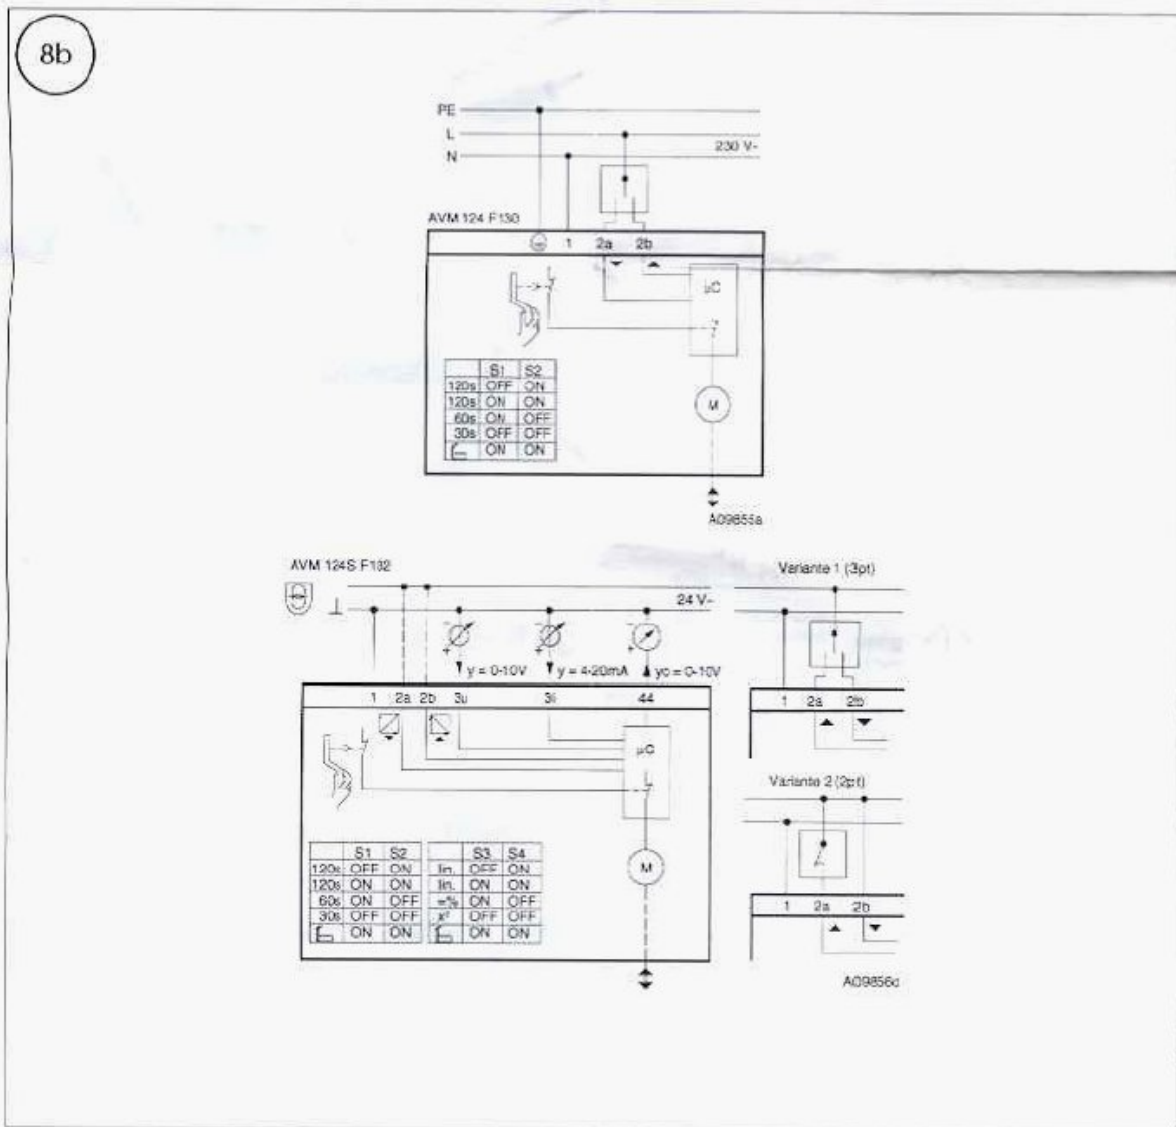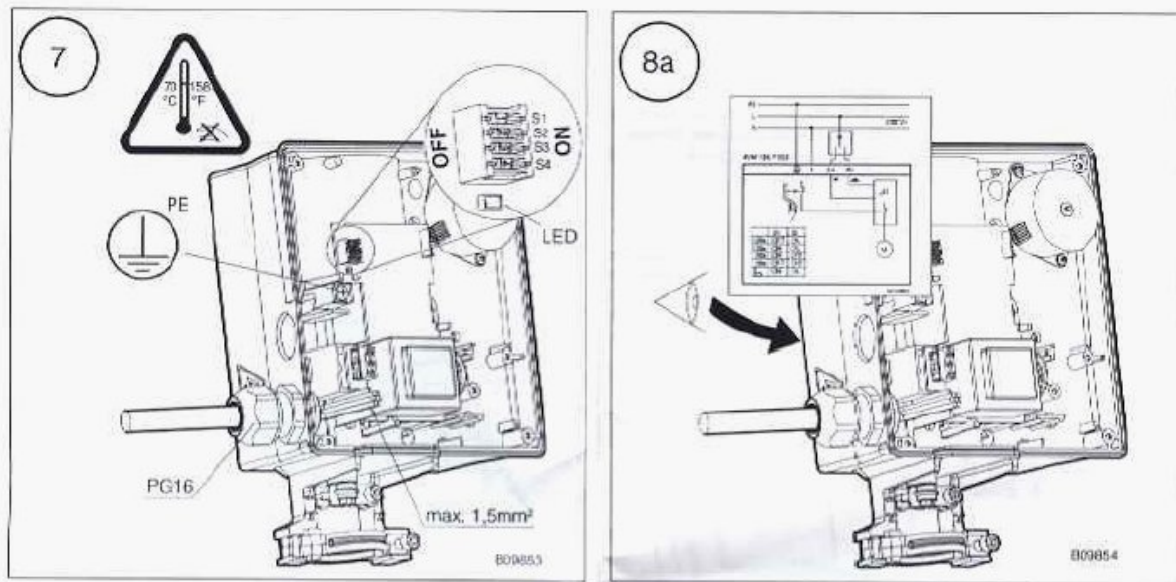

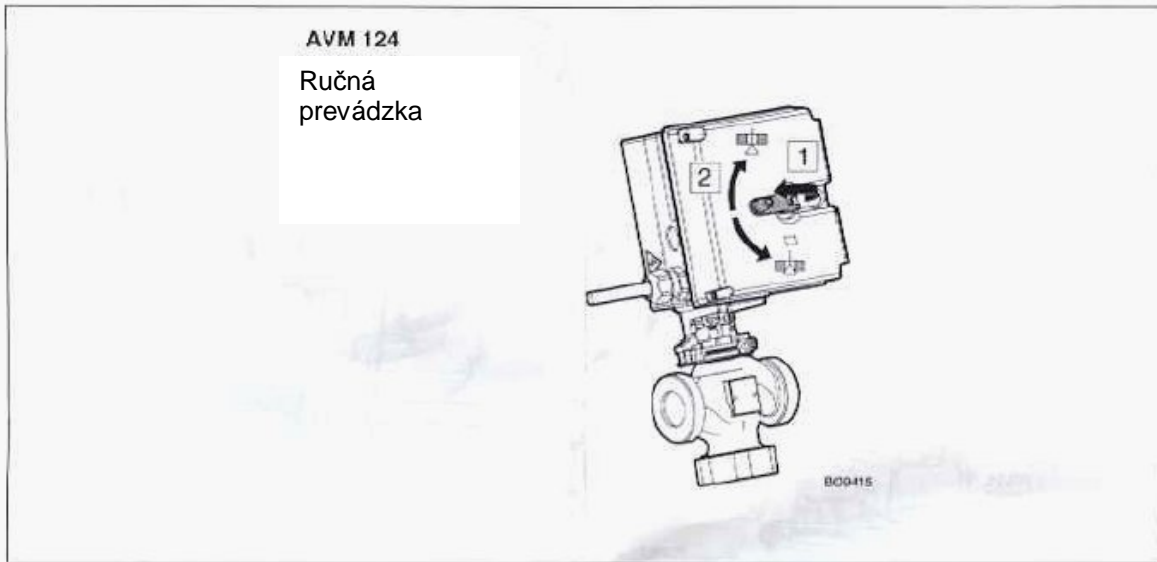




Ukazovateľ LED





AVM 124

zelená

| | |
|--|--|
| drive stopped (due to manual adjustment) |  |
| drive moves in setpoint direction |  |
| too much force detected |  |

AVM 124...S

zelená

| | |
|---|--|
| auto-reset (initialisation) |  |
| at a standstill (setpoint=actual position, manual adjustment) |  |
| drive moves in setpoint direction |  |
| too much force detected |  |

B09857